

902

ClimAir® car comfort

(D) Einbauanleitung

(GB) Installation instructions

(F) Consignes de montage






(E) Instrucciones de montaje





(RUS) Инструкция по монтажу и установке



QR-Code - Einbaufilm Windabweiser

QR-Code - Fitting film wind deflector

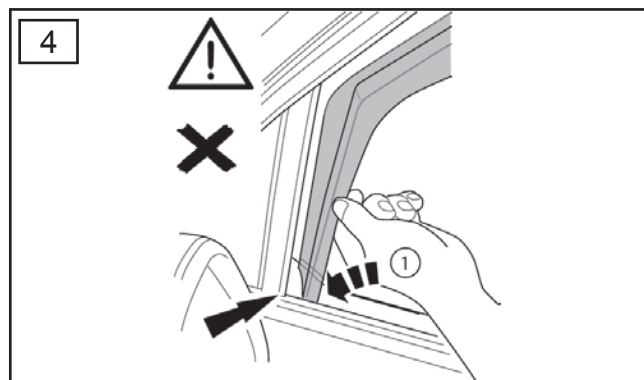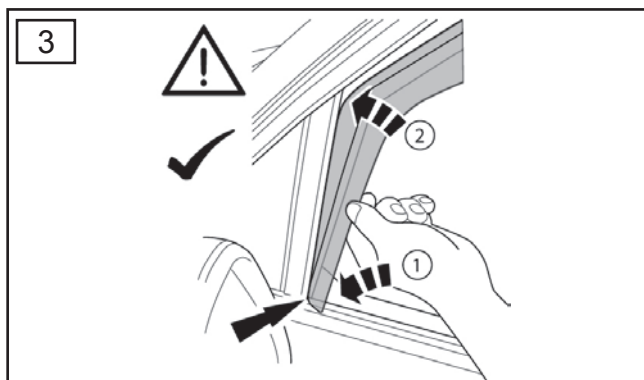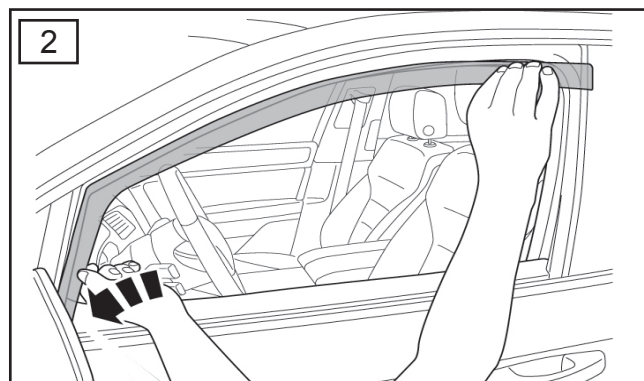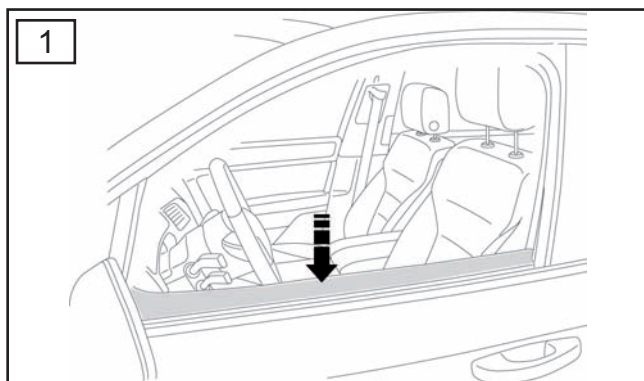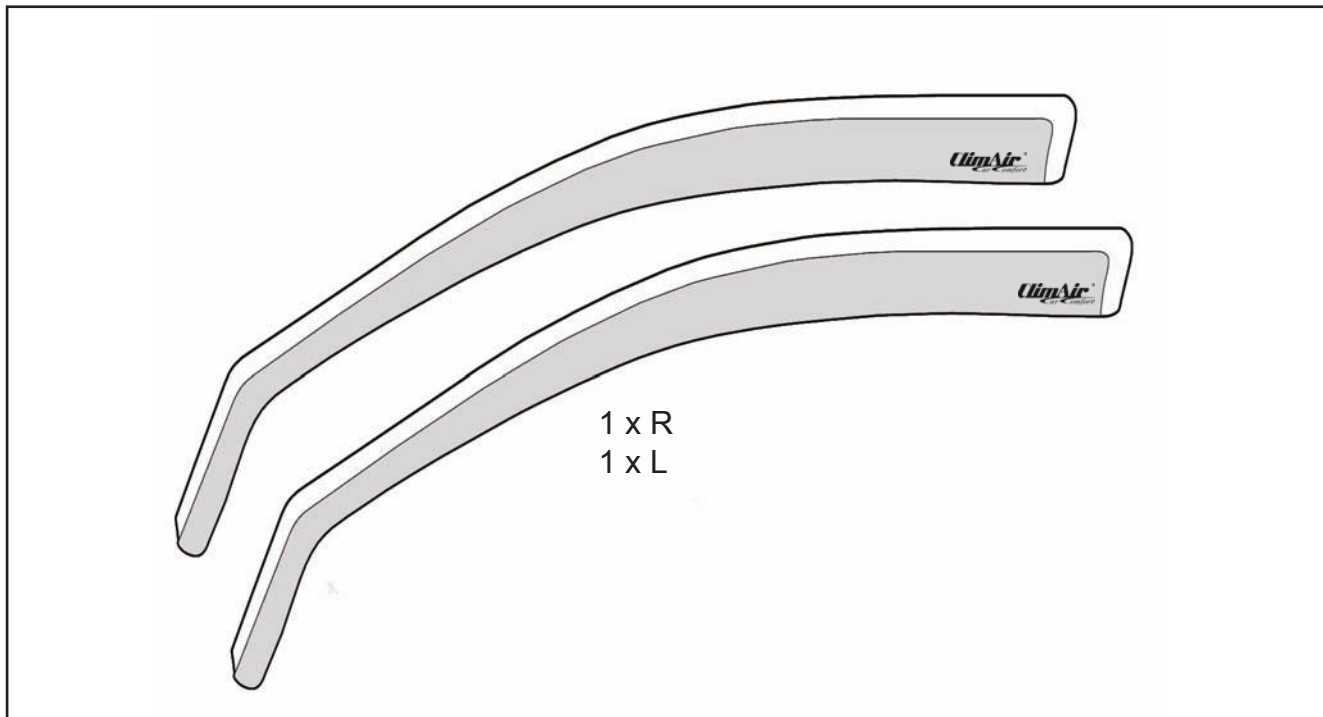

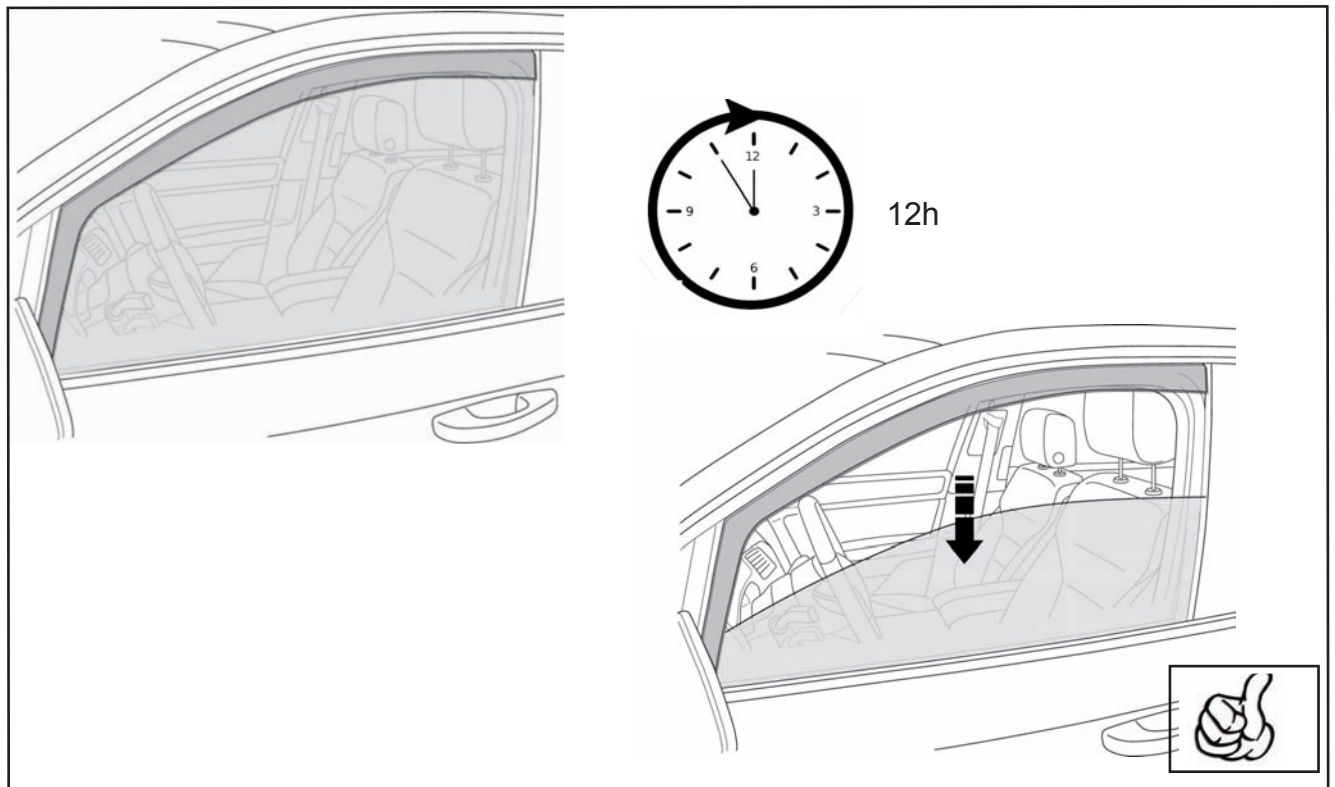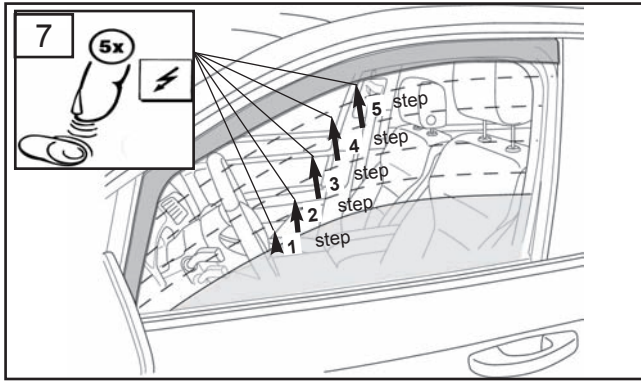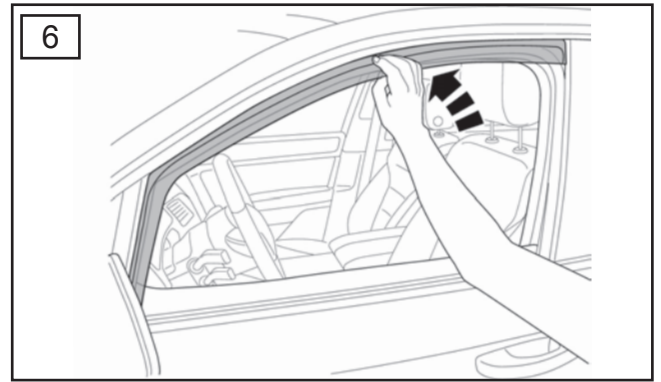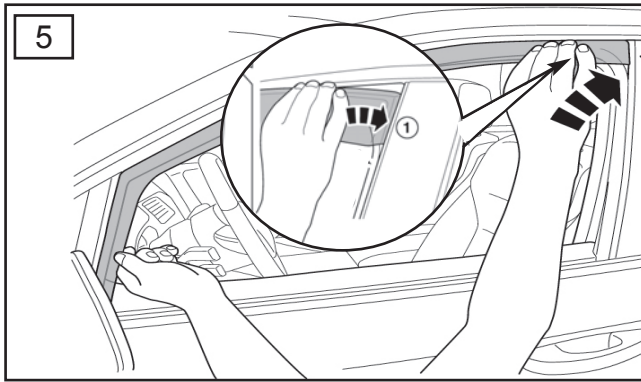

Weitere Informationen zum Einbau finden Sie unter:
 For more information on installation, see:
 Pour plus d'informations sur l'installation, voir:
 Para obtener más información sobre la instalación, vea:
 Для получения дополнительной информации по установке, см.:



www.climair.de/einbaufilm

Oder scannen Sie per Handy diesen QR-Code
 Or scan this qr-code with your handy

ClimAir®
 ar comfort

PLAVA Kunststoffe GmbH

Am Spitzacker 22 - 61184 Karben

Telefon: +49(0)6039 - 9 16 3-0

Fax: +49(0)6039 - 21 85

info@climair.de - www.climair.de